





Essentials

for water hygiene
at the point-of-use

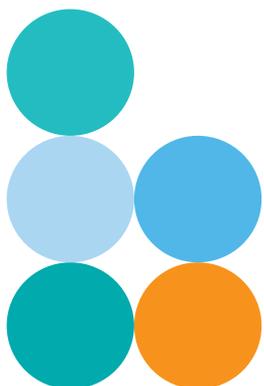

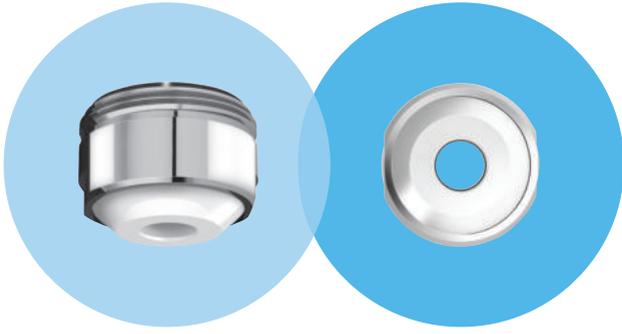

HYGIENE+ outlet

- Free flow outlet with no grid or partitions in contact with the water
- Water cannot stagnate in the internal part
- Made from Hostaform® (scale-resistant material)
- Chrome-plated brass collar


This HYGIENE+ outlet can only be installed on a basin mixer or tap with a restricted flow rate (5 lpm max.) to ensure a good flow with no splashing.



AT923024

AT923022

HYGIENE+ outlet	
M24/100 (each)	AT923024
M24/100 (50 per pack)	AT923024.50P
F22/100 (each)	AT923022
F22/100 (50 per pack)	AT923022.50P

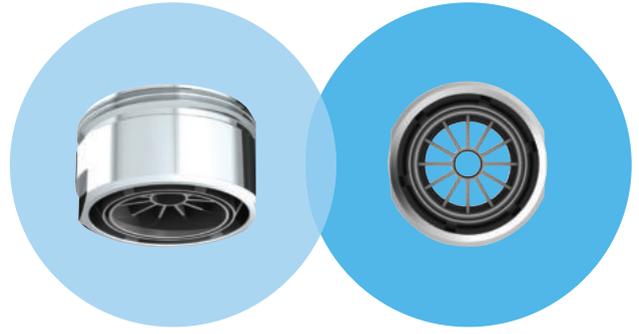

Hygienic flow straightener

- Star-shaped with no grid: reduces bacterial development
- Chrome-plated brass collar



AT921024.2P

AT921022.2P


Hygienic flow-straightener	
M24/100 (2 per pack)	AT921024.2P
M24/100 (50 per pack)	AT921024.50P
F22/100 (2 per pack)	AT921022.2P
F22/100 (50 per pack)	AT921022.50P



HYGIENE+ waste


With concave chrome-plated brass grid

- Hygienic washbasin waste M1¼"
- Concave grid (no water retention)
- Free flow, with no central screw (avoids scale deposits and reduces bacterial development)
- Polished chrome-plated brass grid, chrome-plated ABS body
- Can be tightened to a min. 1mm or max. 45mm, pre-scored waste (snap-off sections can be removed for models with overflow)
- Complies with European standard EN 274-1
- 10-year warranty

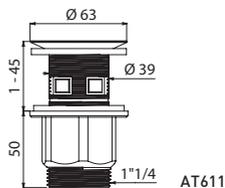

AT611

HYGIENE+ waste	AT611
----------------	-------

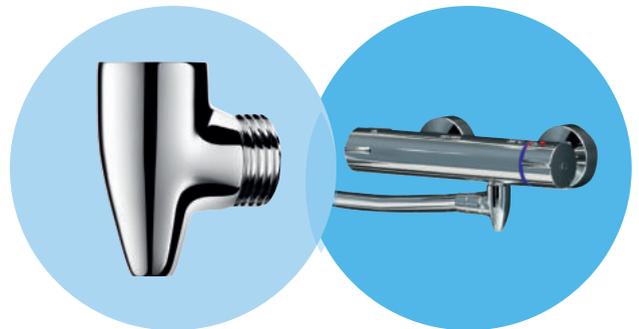


Auto-draining device

For shower and shower/bath mixers

- Automatically drains the shower head and flexible shower hose
- Prevents water stagnation and reduces bacterial proliferation
- Chrome-plated solid brass body with downstream purge
- Inlet F½" with filter to connect (to the bottom outlet of the mixer)
- Outlet M½" (to connect to the flexible hose)
- 10-year warranty

We recommend using a short flexible hose with the auto-draining device (see opposite).

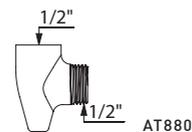

AT880


Auto-draining device	AT880
----------------------	-------



SILVER flexible shower hose


FF 1/2" flexible hose in smooth PVC, L. 0.85m

- Smooth, metal-effect, reinforced food grade PVC
- Will withstand strain (50kg), bending and twisting



SILVER flexible hose, L. 0.85m

AT836T3

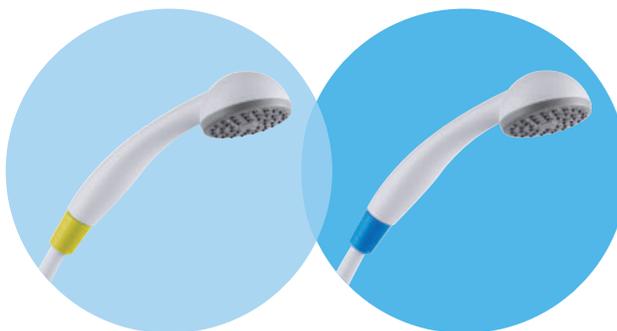


Disposable shower kits

With coloured conical unions, monojet shower head

Disposable shower kit includes:

- 25 white PVC flexible hoses L. 1.50m with coloured ABS conical unions: blue or yellow
- 25 white monojet shower heads, Ø 70mm: rain effect.

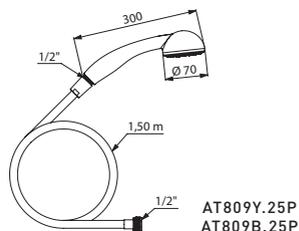

Disposable shower kits, monojet

Yellow kit (25 per pack)	AT809Y.25P
Blue kit (25 per pack)	AT809B.25P




Specifically for healthcare facilities

Disposable shower kit: can be regularly replaced

Shower hose with smooth exterior/interior: easy to maintain and reduces bacterial development

Coloured conical unions: clear visual indication to ensure correct shower kit replacement



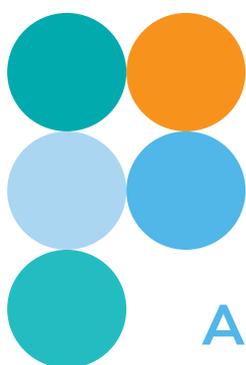

**AQUATOOLS, expert in water hygiene
at the point-of-use.**

AQUATOOLS
infection control solutions

26, rue Charles-Édouard Jeanneret
78300 Poissy – France
Tel.: +33 (0)1 39 75 02 20
Fax: +33 (0)1 39 75 08 28
Email: contact@aqua-tools.com

aqua-tools.com